


## **Wheel Change Model 11:**

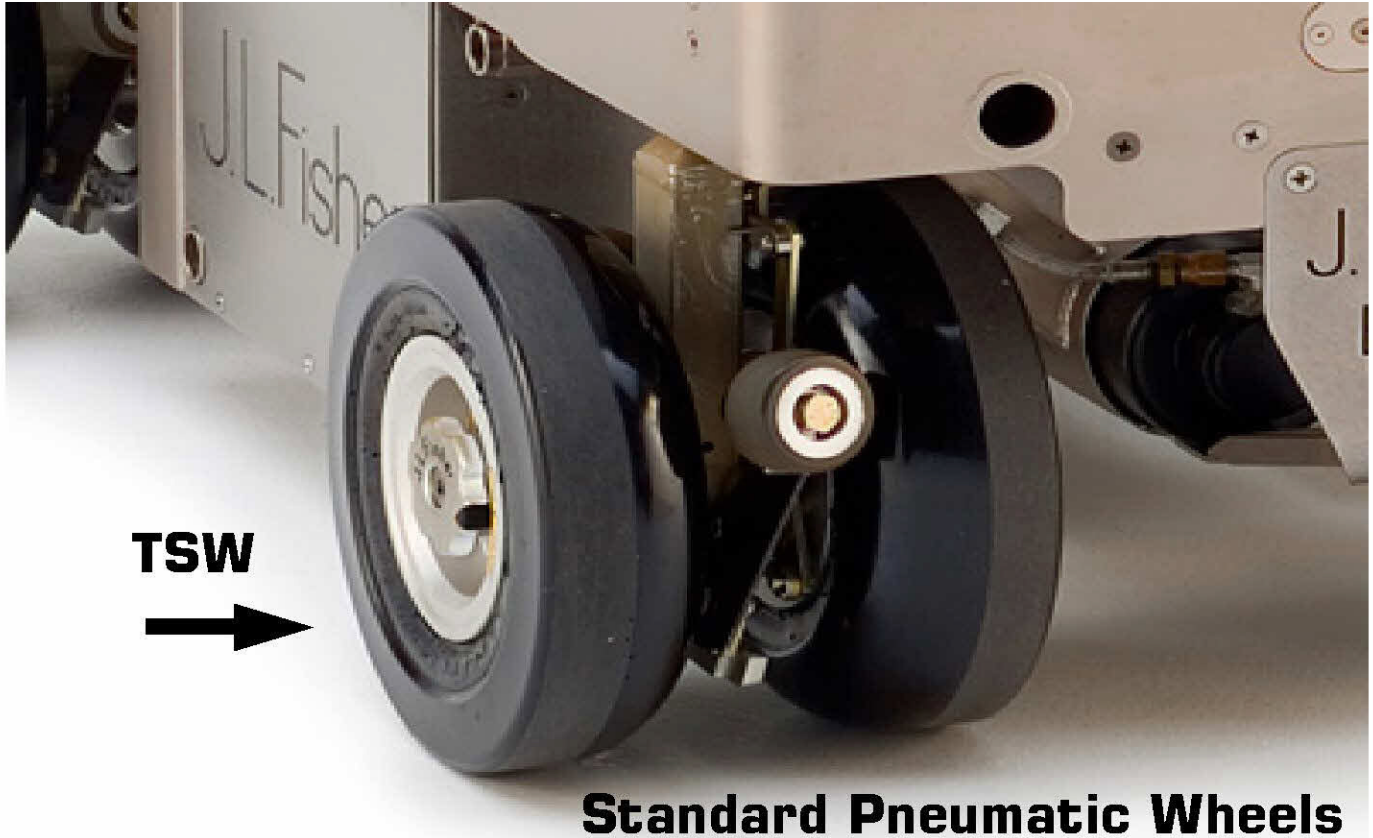

**Standard Pneumatic Wheels**

Film locations vary. It may be beneficial to change out the dolly standard pneumatic wheels for special purpose ones we have available.

See our **Model 11** Dolly brochure for additional information on these products.


**Note:** Wheels **cannot** be removed or installed with the brakes on!

**SWE**



**SWE**- Soft Wheels

**SKE**

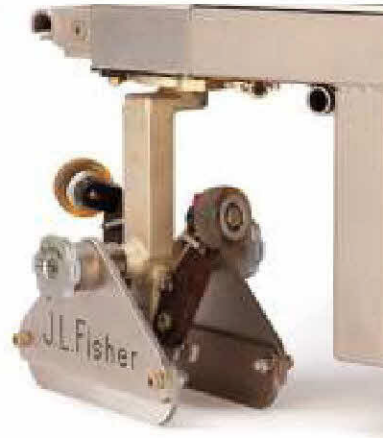


Ice Skates- **SKE**

**SCWE**



**SCWE**- Soft Compound

**ETW**

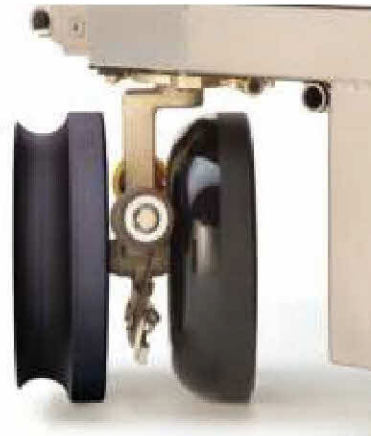

Round Track- **ETW**

To **CHANGE** a wheel:

- Place the Dolly on level ground.
- **RELEASE THE BRAKES AND LEAVE THEM OFF UNTIL YOU COMPLETE THE WHEEL CHANGE.**

- Be aware of accessories that may be in the way. Swinging seats or offsets may present a hazard.
- Support the dolly so wheel can be removed in a safe manner. Use a dolly jack- **UDJ** pair of track wedges, 1/2 apple box or pancake- as long as it is safe!



- Remove the hub cap in center of the wheel by turning it counter clockwise. If tight – you may need 3/16" allen hex key from bumper.
- Remove old wheel.
- Place new wheel onto axle and secure hand tight with hub cap.



Remember-

**LEAVE THE BRAKES OFF UNTIL COMPLETE!**

Wheels **cannot** be removed or installed with the brakes on.